

5-Phase Stepping Motor and Driver Specifications

(○ : General specifications, ◎ : High-torque specifications)

		Motor			Driver		
		Type	Model	Torque (kgf • cm)	A/phase (A)	MD5-HD14/MD5-ND14	MD5-HF14
24 Square	Shaft type	02K-S523(W)	0.18	0.75	○	◎	
		04K-S525(W)	0.28	0.75	○	◎	
42 Square	Shaft type	A1K-S543(W)	1.3	0.75	○	◎	
		A2K-S544(W)	1.8	0.75	○	◎	
		A3K-S545(W)	2.4	0.75	○	◎	
	Hollow shaft type	AH1K-S543	1.3	0.75	○	◎	
		AH2K-S544	1.8	0.75	○	◎	
		AH3K-S545	2.4	0.75	○	◎	
	Geared built-in type	A10K-S545(W)-G5	10	0.75	○	◎	
		A15K-S545(W)-G7.2	15	0.75	○	◎	
		A15K-S545(W)-G10	15	0.75	○	◎	
60 Square	Shaft type / Shaft type + Brake built-in type	A4K-S564(W)-B	4.2	0.75	○	◎	
		A4K-M564(W)-B	4.2	1.4	○	◎	
		A8K-S566(W)-B	8.3	0.75	○	◎	
		A8K-M566(W)-B	8.3	1.4	○	◎	
		A16K-M569(W)-B	16.6	1.4	○	◎	
		A16K-G569(W)-B	16.6	2.8			◎
	Hollow shaft type	AH4K-S564(W)	4.2	0.75	○	◎	
		AH4K-M564(W)	4.2	1.4	○	◎	
		AH8K-S566(W)	8.3	0.75	○	◎	
		AH8K-M566(W)	8.3	1.4	○	◎	
		AH16K-M569(W)	16.6	1.4	○	◎	
		AH16K-G569(W)	16.6	2.8			◎
	Geared built-in type/ Geared + Brake built-in type	A35K-M566(W)-GB5	35	1.4	○	◎	
		A40K-M566(W)-GB7.2	40	1.4	○	◎	
		A50K-M566(W)-GB10	50	1.4	○	◎	
	Rotary actuator / Rotary actuator + Brake built-in type	A35K-M566(W)-RB5	35	1.4	○	◎	
		A40K-M566(W)-RB7.2	40	1.4	○	◎	
		A50K-M566(W)-RB10	50	1.4	○	◎	
85 Square	Shaft type / Shaft type + Brake built-in type	A21K-M596(W)-B	21	1.4	○	◎	
		A21K-G596(W)-B	21	2.8			◎
		A41K-M599(W)-B	41	1.4	○	◎	
		A41K-G599(W)-B	41	2.8			◎
		A63K-M5913(W)-B	63	1.4	○	◎	
		A63K-G5913(W)-B	63	2.8			◎
	Hollow shaft type	AH21K-M596(W)	21	1.4	○	◎	
		AH21K-G596(W)	21	2.8			◎
		AH41K-M599(W)	41	1.4	○	◎	
		AH41K-G599(W)	41	2.8			◎
		AH63K-M5913(W)	63	1.4	○	◎	
		AH63K-G5913(W)	63	2.8			◎
	Geared built-in type/ Geared + Brake built-in type	A140K-M599(W)-GB5	140	1.4	○	◎	
		A140K-G599(W)-GB5	140	2.8			◎
		A200K-M599(W)-GB7.2	200	1.4	○	◎	
		A200K-G599(W)-GB7.2	200	2.8			◎
		A200K-M599(W)-GB10	200	1.4	○	◎	
		A200K-G599(W)-GB10	200	2.8			◎

※ (W) stands for dual shaft of motor. The brake built-in type provides single shaft only.

※ The motor has a big difference in torque by the characteristics of the driver.

Please refer to the graph in this catalogue that shows the characteristics of motors and drivers.



For MD5-HD14, MD5-ND14, the high-speed region torque characteristics are better at 35VDC than at 20VDC.

In addition, MD5-HF14, MD5-HF28 have further improved torque characteristics in the high-speed area than using DC type driver.


※ 85 square stepping motor has further improved high speed characteristics of 1.4[A/phase] adjusting the phase current at that of MD5-HF28.

MD5 Series

5-Phase microstepping motor driver [MD5-HD14]

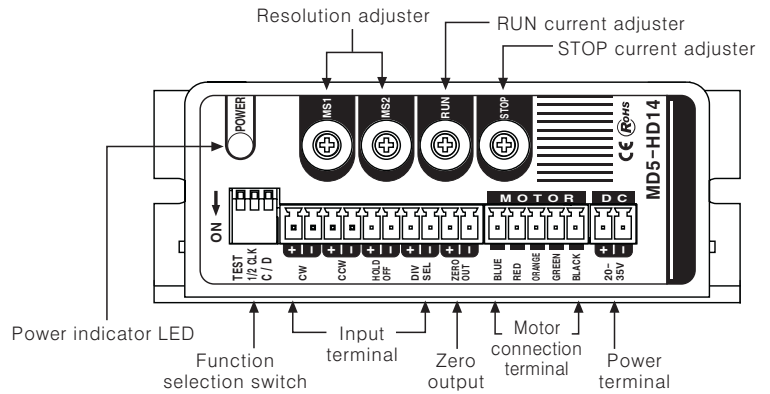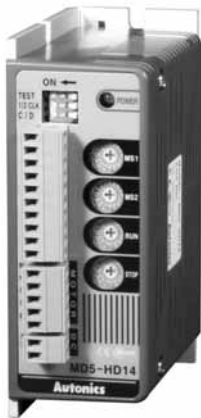

◎Function selection switch

 

NO	Name	Function	Switch position	
			ON	OFF
1	TEST	Self-diagnosis	Rotate in 250pps	Normal
2	1/2 CLK	Pulse input method	1 Pulse input	2 Pulse input
3	C/D	Auto Current Down	Not using	Using

●TEST

- ※ Self-diagnosis function is to test motors and drivers.
- ※ Motors rotate with 250 pps in full-step. Motor rotation speed is subject to change depending on resolution setting.
- ※ Rotation speed = 250 pps / resolution
- ※ The motor will rotate in CCW direction when in 1-pulse input mode and in CW direction when in 2-pulse input mode. Note) Make sure that TEST switch is set to OFF before supplying the power.
It may cause injury or danger if TEST switch is set to ON when power is supplied.

●1/2 CLK

- ※ 1/2 CLK switch is to select pulse input mode.
- ※ 1-pulse input mode : CW → operation command pulse input, CCW → rotation direction pulse input
([H]: CW rotation, [L]: CCW rotation)
- ※ 2-pulse input mode : CW → CW direction rotation pulse input, CCW → CCW direction rotation pulse input

●C/D (Auto Current Down)

- ※ A function to automatically reduce the current in order to suppress the heat generation at motor standstill.
- ※ Auto current down function will be activated no operation command pulse is input within 500ms.

◎RUN current setting

Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Current (A/Phase)	0.4	0.5	0.57	0.63	0.71	0.77	0.84	0.9	0.96	1.02	1.09	1.15	1.22	1.27	1.33	1.4

- ※ RUN current is a phase current provided to 5-phase stepping motor.
- ※ Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.
- ※ Adjust the RUN current in case severe heat generation occurs. Be sure that torque decreasing may occur when adjusting the current.
- ※ RUN current setting value may have some deviation depending on motor's running frequency.
- ※ Be sure to adjust RUN current while motor is running.


◎STOP current setting

Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
%	27	31	36	40	45	50	54	58	62	66	70	74	78	82	86	90

- ※ STOP current is a phase current provided to 5-phase stepping motor at standstill.
- ※ It will be activated when C/D (Auto Current Down) is set to ON. By setting STOP Current, it is possible to suppress the heat generation at motor standstill.
- ※ STOP Current setting value is the ratio of RUN current setting value (%).
- Ex) In case Run current setting value is set to 1.4A and STOP Current setting value is set to 50%, Auto Current Down current is set to 0.7A.
- ※ STOP current setting value may have some deviation depending on resistance impedance of motor.
- ※ Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

5-Phase Stepping Motor Driver

◎Zero Point Excitation Output Signal (ZERO OUT)

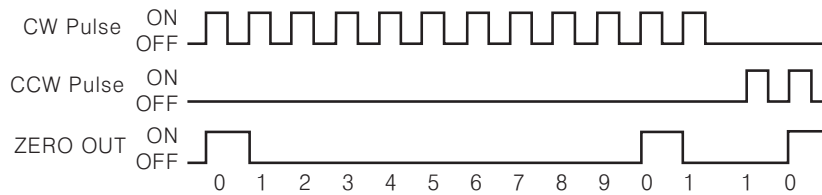

※The signal is output to indicate when the motor excitation status is in the initial stage. / Used to check the rotation position of motor's axis

※In case of Full step, the signal is output every 0.72°. (50 times / rotation)

EX) Full Step (0.72° / Step): Signal is output every 10 pulses.

20 divisions (0.036° / Step): Signal is output every 200 pulses.

◎HOLD OFF function

 
※When HOLD OFF input signal is [H], motor excitation is released.

When HOLD OFF input signal is [L], motor excitation is in a normal status.

※A function used to rotate motor's axis using external force or used for manual positioning.

※HOLD OFF Input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.

◎Setting microstep (Microstep : Resolution)



Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Resolution	1	2	4	5	8	10	16	20	25	40	50	80	100	125	200	250

●Resolution Setting (Same as MS1, MS2)

※It is set to MS1 when division selection signal is [L], and MS2 when division selection signal is [H].

※Two different micro step can be set using DIVISION SELECTION. Users can select one of them via external input signals.

※Microstepping is to make basic step angle of 5-phase motors (0.72°) divided into smaller angle according to setting values.

※The formula for microstep angle is:


$$\text{Motor revolution angle (5-phase motors)} = \frac{\text{Basic step angle}(0.72^\circ)}{\text{Resolution}}$$

※In case of geared motors, step angle shall be determined by dividing step angle by gear ratio.

EX) 0.72° / 10 (1:10) = 0.072°

※It may cause step-out if resolution is changed while motor is running.

■Input · Output diagram

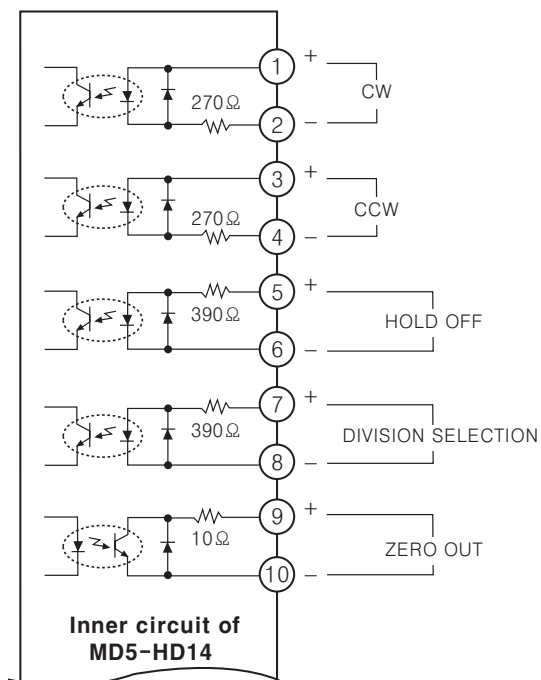

※CW

2-pulse input mode – CW direction rotation pulse input

1-pulse input mode – Operation command pulse input

※CCW

2-pulse input mode – CCW direction rotation pulse input

1-pulse input mode – rotation direction pulse input

[H] : CW, [L] : CCW

※HOLD OFF

Motor excitation OFF control signal

[H] : Motor excitation OFF

※DIVISION SELECTION

Division selection signal

→ [L] : Operated by MS1 setting resolution.

[H] : Operated by MS2 setting resolution.

※ZERO OUT

Zero point excitation output signal ON for zero point excitation

(A)
Counter

(B)
Timer

(C)
Temp.
controller

(D)
Power
controller

(E)
Panel
meter

(F)
Tacho/
Speed/
Pulse
meter

(G)
Display
unit

(H)
Sensor
controller

(I)
Switching
power
supply

(J)
Proximity
sensor

(K)
Photo
electric
sensor

(L)
Pressure
sensor

(M)
Rotary
encoder

(N)
Stepping
motor &
Driver &
Controller


(O)
Graphic
panel

(P)
Field
network
device


(Q)
Production
stoppage
models &
replacement

MD5 Series

Connections

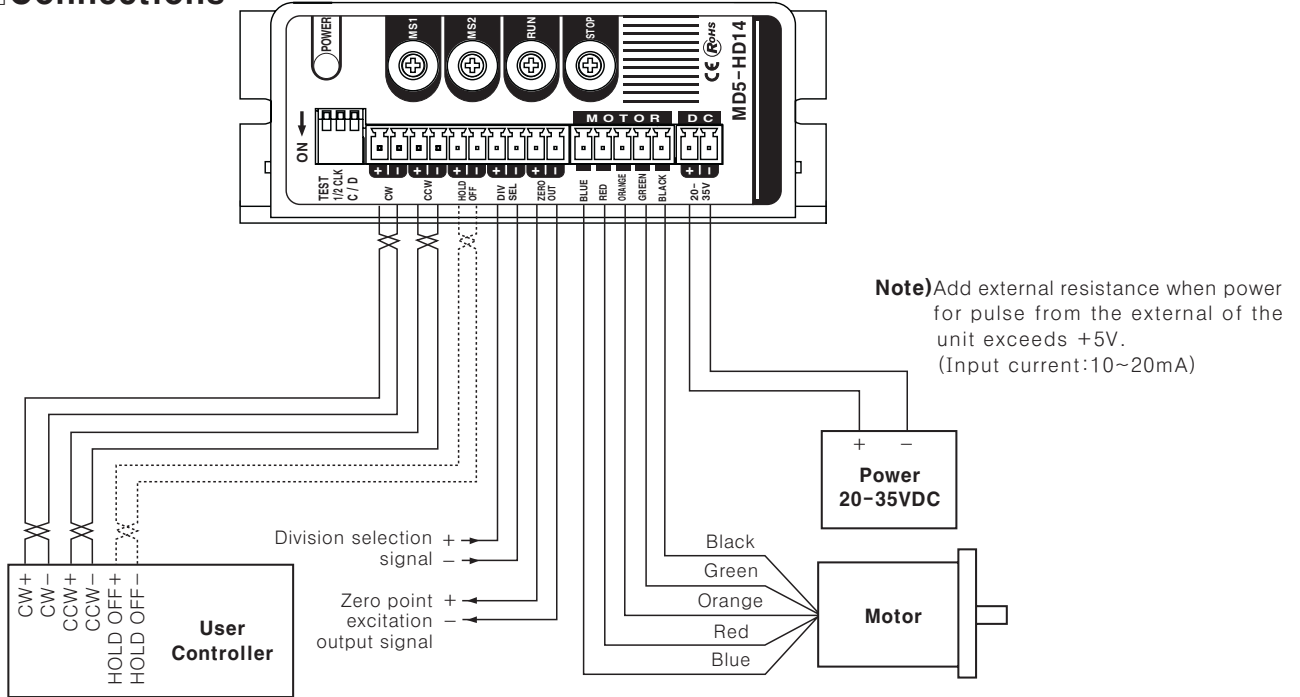


Dimensions

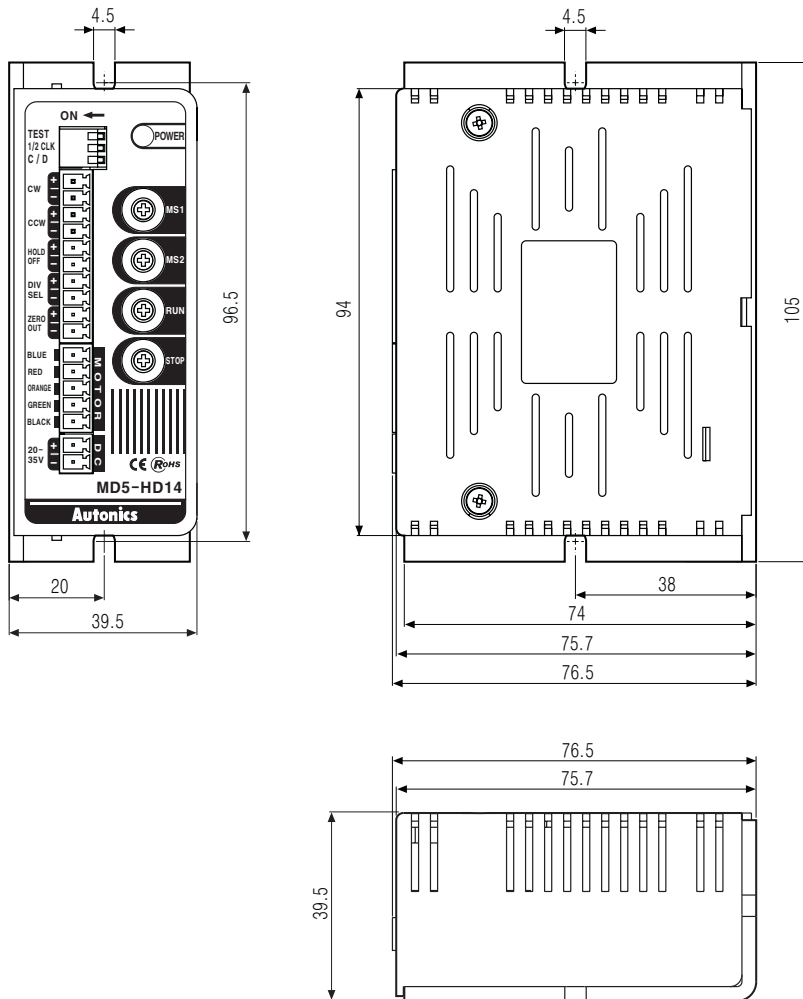


(Unit:mm)

5-Phase Stepping Motor Driver

5-Phase microstepping motor driver [MD5-HF14]

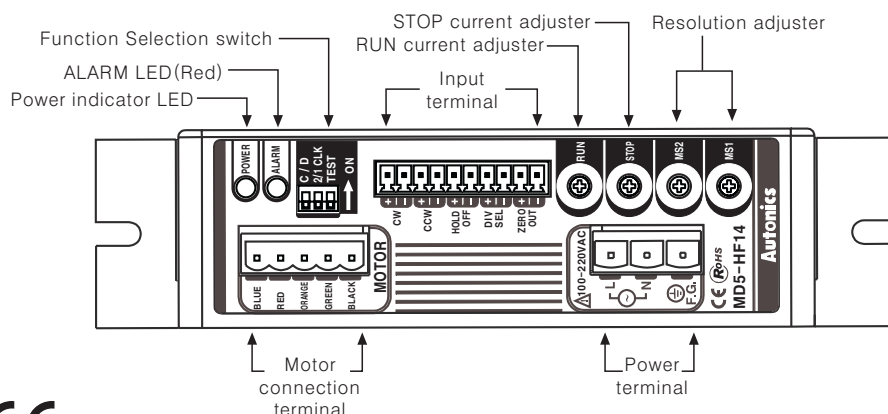

○Function selection switch

 

No	Name	Function	Switch position	
			ON	OFF
1	TEST	Self-diagnosis	Rotate in 250pps	—
2	2/1 CLK	Pulse input method	1Pulse input	2Pulse input
3	C/D	Auto Current Down	Not using	Using

●TEST

- ※ Self-diagnosis function is to test motors and drivers.
- ※ Motors rotate with 250 pps in full-step. Motor rotation speed is subject to change depending on resolution setting.
- ※ Rotation speed = 250 pps / resolution
- ※ The motor will rotate in CCW direction when in 1-pulse input mode and in CW direction when in 2-pulse input mode.
- Note) Make sure that TEST switch is set to OFF before supplying the power.
It may cause injury or danger if TEST switch is set to ON when power is supplied.

●1/2 CLK

- ※ 1/2 CLK switch is to select pulse input mode.
- ※ 1-pulse input mode : CW → operation command pulse input, CCW → rotation direction pulse input
([H]: CW rotation, [L]: CCW rotation)
- ※ 2-pulse input mode : CW → CW direction rotation pulse input, CCW → CCW direction rotation pulse input

●C/D (Auto Current Down)

- ※ A function to automatically reduce the current in order to suppress the heat generation at motor standstill.
- ※ Auto current down function will be activated no operation command pulse is input within 500ms.

○RUN current setting



Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Current (A/Phase)	0.4	0.5	0.57	0.63	0.71	0.77	0.84	0.9	0.96	1.02	1.09	1.15	1.22	1.27	1.33	1.4

- ※ RUN current is a phase current provided to 5-phase stepping motor.
- ※ Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.
- ※ Adjust the RUN current in case severe heat generation occurs. Be sure that torque decreasing may occur when adjusting the current.
- ※ RUN current setting value may have some deviation depending on motor's running frequency.
- ※ Be sure to adjust RUN current while motor is running.

○STOP current setting



Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
%	27	31	36	40	45	50	54	58	62	66	70	74	78	82	86	90

- ※ STOP current is a phase current provided to 5-phase stepping motor at standstill.
- ※ It will be activated when C/D (Auto Current Down) is set to ON. By setting STOP Current, it is possible to suppress the heat generation at motor standstill.
- ※ STOP Current setting value is the ratio of RUN current setting value (%).
- Ex) In case Run current setting value is set to 1.4A and STOP Current setting value is set to 50%, Auto Current Down current is set to 0.7A.
- ※ STOP current setting value may have some deviation depending on resistance impedance of motor.
- ※ Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller


(O) Graphic panel

(P) Field network device

(Q) Production stoppage models & replacement

MD5 Series

◎Zero Point Excitation Output Signal (ZERO OUT)

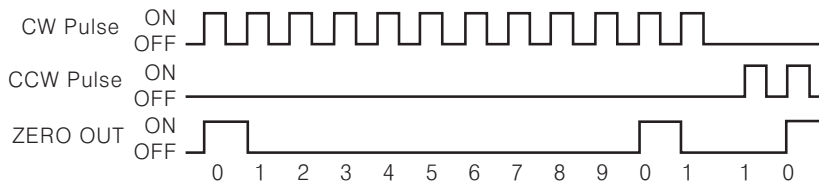

- ※The signal is output to indicate when the motor excitation status is in the initial stage. / Used to check the rotation position of motor's axis
- ※In case of Full step, the signal is output every 0.72°. (50 times / rotation)
- EX) Full Step (0.72°/Step): Signal is output every 10 pulses.
- 20 divisions (0.036°/Step): Signal is output every 200 pulses.

◎HOLD OFF function

- ※When HOLD OFF input signal is [H], motor excitation is released.
- When HOLD OFF input signal is [L], motor excitation is in a normal status.
- ※A function used to rotate motor's axis using external force or used for manual positioning.
- ※HOLD OFF Input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.

◎Setting microstep (Microstep : Resolution)



Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Resolution	1	2	4	5	8	10	16	20	25	40	50	80	100	125	200	250

●Resolution Setting (Same as MS1, MS2)

- ※It is set to MS1 when division selection signal is [L], and MS2 when division selection signal is [H].
- ※Two different micro step can be set using DIVISION SELECTION. Users can select one of them via external input signals.
- ※Microstepping is to make basic step angle of 5-phase motors (0.72°) divided into smaller angle according to setting values.
- ※The formula for microstep angle is;


$$\text{Motor revolution angle (5-phase motors)} = \frac{\text{Basic step angle}(0.72^\circ)}{\text{Resolution}}$$

- ※In case of geared motors, step angle shall be determined by dividing step angle by gear ratio.
- EX) 0.72° / 10 (1:10) = 0.072°
- ※It may cause step-out if resolution is changed while motor is running.

◎ALRAM Function

- ※Over Heat : When the temperature in driver BASE is over 80°C, Alarm LED will be ON and motor will stop with holding the torque. Remove the Over Heat Alarm causing factors and reset the power in order to reset alarm function.
- ※Overcurrent : When overcurrent is applied to the motor due to driver damage or errors, Alarm LED will be flickering. In case of overcurrent, the motor will be HOLD OFF. Cut off the power and remove overcurrent-causing factors in order to resume normal operation.

■Input · Output diagram

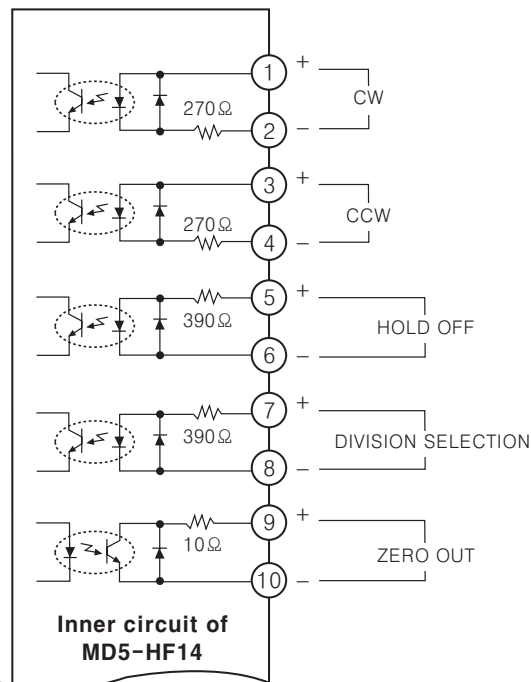

※CW

- 2-pulse input mode – CW direction rotation pulse input
- 1-pulse input mode – Operation command pulse input

※CCW

- 2-pulse input mode – CCW direction rotation pulse input
- 1-pulse input mode – rotation direction pulse input
- [H] : CW, [L] : CCW

※HOLD OFF

- Motor excitation OFF control signal
- [H] : Motor excitation OFF

※DIVISION SELECTION


- Division selection signal
- [L] : Operated by MS1 setting resolution.
- [H] : Operated by MS2 setting resolution.

※ZERO OUT


- Zero point excitation output signal ON for zero point excitation

5-Phase Stepping Motor Driver

Connections

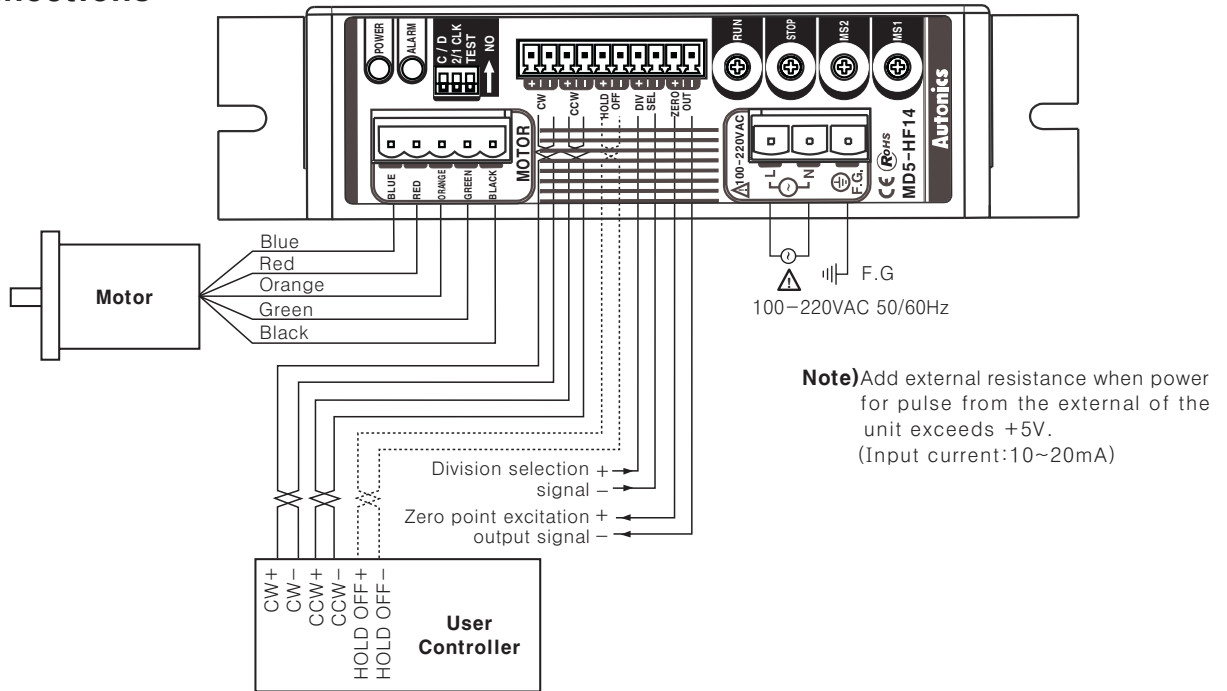

Dimensions

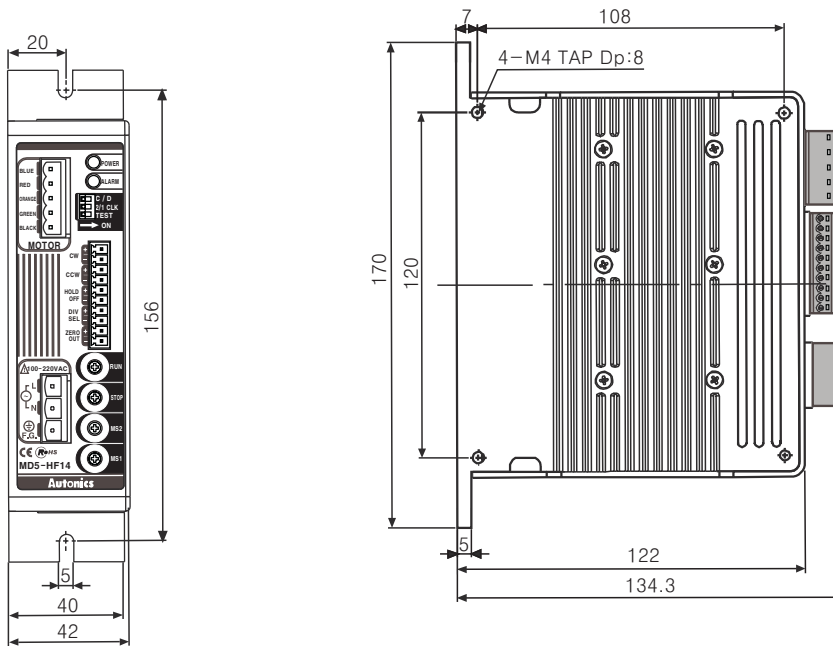


(Unit:mm)

- (A) Counter
- (B) Timer
- (C) Temp. controller
- (D) Power controller
- (E) Panel meter
- (F) Tacho/ Speed/ Pulse meter
- (G) Display unit
- (H) Sensor controller
- (I) Switching power supply
- (J) Proximity sensor
- (K) Photo electric sensor
- (L) Pressure sensor
- (M) Rotary encoder
- (N) Stepping motor & Driver & Controller
- (O) Graphic panel
- (P) Field network device
- (Q) Production stoppage models & replacement


MD5 Series

5-Phase microstepping motor driver [MD5-HF28]

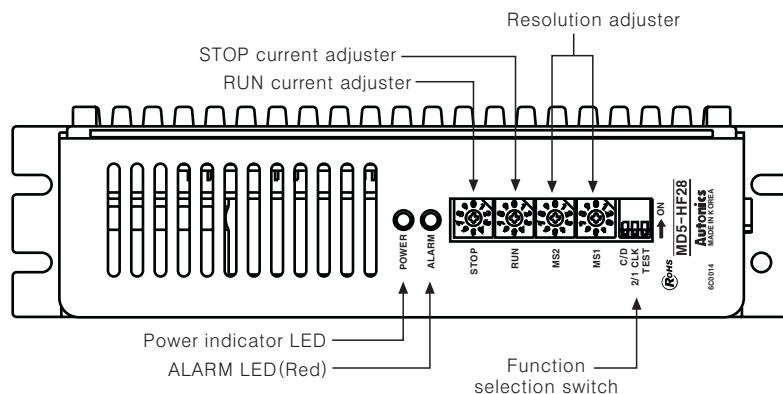

※KR-505G is changed as MD5-HF28.
 ※Power supply 100-220VAC and connected socket are upgraded.

 ○Function selection switch



No	Name	Function	Switch position	
			ON	OFF
1	TEST	Self-diagnosis	Rotate in 250pps	—
2	2/1 CLK	Pulse input method	1Pulse input	2Pulse input
3	Current Down	Auto Current Down	Using	Not using

●TEST

- ※Self-diagnosis function is to test motors and drivers.
 - ※Motors rotate with 250 pps in full-step. Motor rotation speed is subject to change depending on resolution setting.
 - ※Rotation speed = 250 pps / resolution
 - ※The motor will rotate in CCW direction when in 1-pulse input mode and in CW direction when in 2-pulse input mode.
- Note) Make sure that TEST switch is set to OFF before supplying the power.
 It may cause injury or danger if TEST switch is set to ON when power is supplied.

●1/2 CLK

- ※1/2 CLK switch is to select pulse input mode.
- ※1-pulse input mode : CW → operation command pulse input, CCW → rotation direction pulse input
 ([H]: CW rotation, [L]: CCW rotation)
- ※2-pulse input mode : CW → CW direction rotation pulse input, CCW → CCW direction rotation pulse input

●C/D (Auto Current Down)

- ※A function to automatically reduce the current in order to suppress the heat generation at motor standstill.
- ※Auto current down function will be activated no operation command pulse is input within 500ms.

○RUN current setting

Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Current (A/Phase)	1.14	1.25	1.36	1.50	1.63	1.74	1.86	1.97	2.10	2.20	2.30	2.40	2.50	2.60	2.78	2.88

- ※RUN current is a phase current provided to 5-phase stepping motor.
- ※Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.
- ※Adjust the RUN current in case severe heat generation occurs. Be sure that torque decreasing may occur when adjusting the current.
- ※RUN current setting value may have some deviation depending on motor's running frequency.
- ※Be sure to adjust RUN current while motor is running.


○STOP current setting

Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
%	27	31	36	40	45	50	54	58	62	66	70	74	78	82	86	90

- ※TOP current is a phase current provided to 5-phase stepping motor at standstill.
 - ※It will be activated when C/D (Auto Current Down) is set to ON. By setting STOP Current, it is possible to suppress the heat generation at motor standstill.
 - ※STOP Current setting value is the ratio of RUN current setting value (%).
- Ex) In case Run current setting value is set to 1.4A and STOP Current setting value is set to 50%, Auto Current Down current is set to 0.7A.
- ※STOP current setting value may have some deviation depending on resistance impedance of motor.
 - ※Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

5-Phase Stepping Motor Driver

◎Zero Point Excitation Output Signal (ZERO OUT)

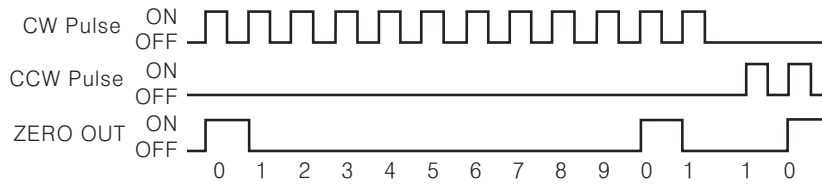

- ※ The signal is output to indicate when the motor excitation status is in the initial stage. / Used to check the rotation position of motor's axis
- ※ In case of Full step, the signal is output every 0.72° . (50 times / rotation)
- EX) Full Step (0.72° / Step): Signal is output every 10 pulses.
20 divisions (0.036° / Step): Signal is output every 200 pulses.

◎HOLD OFF function

- ※ When HOLD OFF input signal is [H], motor excitation is released.
- When HOLD OFF input signal is [L], motor excitation is in a normal status.
- ※ A function used to rotate motor's axis using external force or used for manual positioning.
- ※ HOLD OFF Input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.

◎Setting microstep(Microstep : Resolution)



Switch No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Resolution	1	2	4	5	8	10	16	20	25	40	50	80	100	125	200	250

●Resolution Setting(Same as MS1, MS2)

- ※ It is set to MS1 when division selection signal is [L], and MS2 when division selection signal is [H].
- ※ Two different micro step can be set using DIVISION SELECTION. Users can select one of them via external input signals.
- ※ Microstepping is to make basic step angle of 5-phase motors (0.72°) divided into smaller angle according to setting values.
- ※ The formula for microstep angle is:


$$\text{Motor revolution angle (5-phase motors)} = \frac{\text{Basic step angle}(0.72^\circ)}{\text{Resolution}}$$

- ※ In case of geared motors, step angle shall be determined by dividing step angle by gear ratio.
- EX) $0.72^\circ / 10 (1:10) = 0.072^\circ$
- ※ It may cause step-out if resolution is changed while motor is running.

◎ALRAM Function

- ※ Over Heat : When the temperature in driver BASE is over 80°C , Alarm LED will be ON and motor will stop with holding the torque. Remove the Over Heat Alarm causing factors and reset the power in order to reset alarm function.
- ※ Overcurrent : When overcurrent is applied to the motor due to driver damage or errors, Alarm LED will be flickering. In case of overcurrent, the motor will be HOLD OFF. Cut off the power and remove overcurrent-causing factors in order to resume normal operation.

■Input · Output diagram

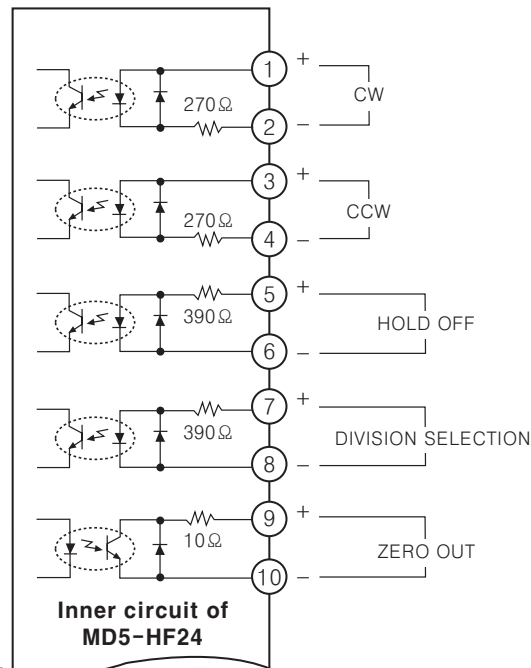

※CW

- 2-pulse input mode – CW direction rotation pulse input
- 1-pulse input mode – Operation command pulse input

※CCW

- 2-pulse input mode – CCW direction rotation pulse input
- 1-pulse input mode – rotation direction pulse input
- [H] : CW, [L] : CCW

※HOLD OFF

- Motor excitation OFF control signal
- [H] : Motor excitation OFF

※DIVISION SELECTION

- Division selection signal
- [L] : Operated by MS1 setting resolution.
- [H] : Operated by MS2 setting resolution.

※ZERO OUT

- Zero point excitation output signal ON for zero point excitation

(A)
Counter

(B)
Timer

(C)
Temp.
controller

(D)
Power
controller

(E)
Panel
meter

(F)
Tacho/
Speed/
Pulse
meter

(G)
Display
unit

(H)
Sensor
controller

(I)
Switching
power
supply

(J)
Proximity
sensor

(K)
Photo
electric
sensor

(L)
Pressure
sensor

(M)
Rotary
encoder

(N)
Stepping
motor &
Driver &
Controller


(O)
Graphic
panel

(P)
Field
network
device


(Q)
Production
stoppage
models &
replacement

MD5 Series

Connections

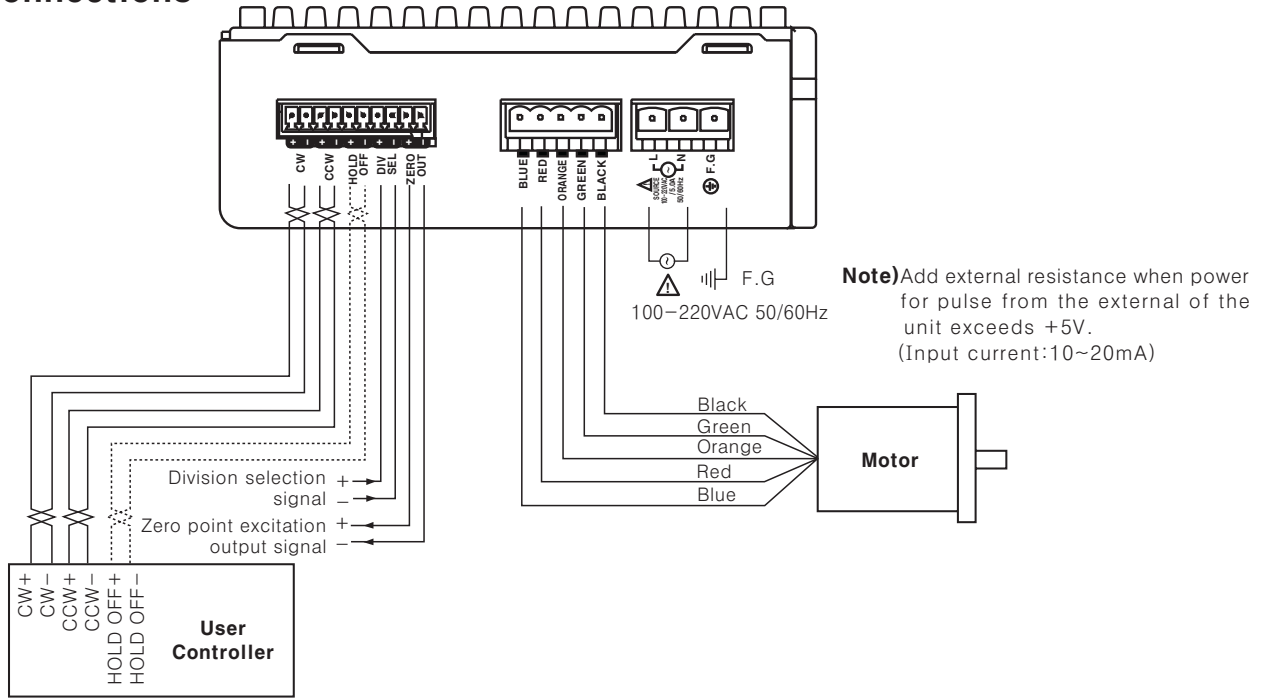


Dimensions

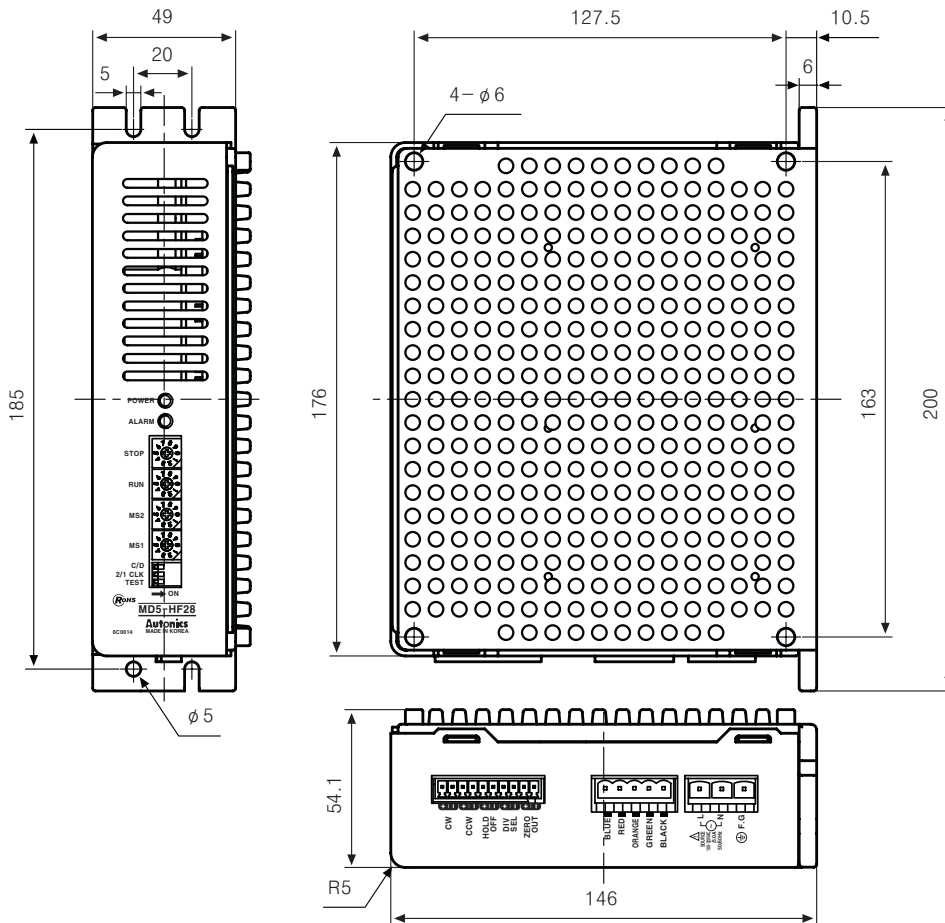

(Unit:mm)

5-Phase Stepping Motor Driver

5-Phase stepping motor driver [MD5-ND14]

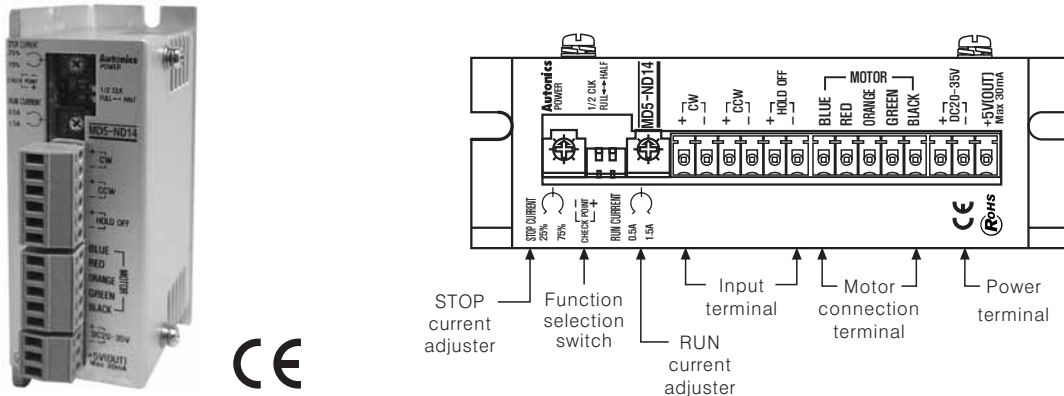

Function selection switch



NO	Name	Function	Switch position	
			ON	OFF
1	1/2 CLK	Pulse input method	1Pulse input	2Pulse input
2	FULL ↔ HALF	Resolution Setting	×1(0.72°)	×2(0.36°)

 
● 1/2 CLK

- ※ 1/2 CLK switch is to select pulse input mode.
- ※ 1-pulse input mode : CW → operation command pulse input, CCW → rotation direction pulse input ([H]: CW rotation, [L]: CCW rotation)
- ※ 2-pulse input mode : CW → CW direction rotation pulse input, CCW → CCW direction rotation pulse input

● FULL ↔ HALF

- ※ FULL ↔ HALF switch is to select pulse input mode.
- ※ If changing resolution while the motor is running, it may cause step-out.

RUN current setting



- ※ RUN current is a phase current provided to 5-phase stepping motor.
- ※ Be sure to set RUN current at the rated current or below. If not, it may cause heat generation, loss of torque or step-out.
- ※ RUN current setting range: 0.5~1.5A
- ※ When changing RUN current, connect CP+ to voltmeter (+) terminal and CP- to voltmeter (-) terminal, then adjust the volume.
- ※ The formula for phase-current setting is;

$$\text{Setting current (A)} = \frac{\text{CP Input Voltage (V)}}{2}$$
- ※ Adjust the RUN current in case severe heat generation occurs. Be sure that torque decreasing may occur when adjusting the current.
- ※ RUN current setting value may have some deviation depending on motor's running frequency.
- ※ Be sure to adjust RUN current while motor is running.

STOP current setting



25% 75%

- ※ STOP current is a phase current provided to 5-phase stepping motor at standstill.
- ※ A function to reduce the current in order to suppress the heat generation at motor standstill / STOP current setting range: 25~75% of RUN current using VR
- ※ In case Run current setting value is set to 1.0A and STOP Current setting value is set to 50%, STOP current is set to 0.5A.
- ※ STOP current setting value may have some deviation depending on resistance impedance of motor.
- ※ STOP current function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- ※ STOP current function will be activated when no operation command pulse is input within 500ms. Note) Be sure to adjust STOP current while motor is at standstill.

HOLD OFF function

- ※ When HOLD OFF input signal is [H], motor excitation is released.
- When HOLD OFF input signal is [L], motor excitation is in a normal status.
- ※ A function used to rotate motor's axis using external force or used for manual positioning.
- ※ HOLD OFF Input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller


(O) Graphic panel

(P) Field network device

(Q) Production stoppage models & replacement

MD5 Series

Signal input circuit

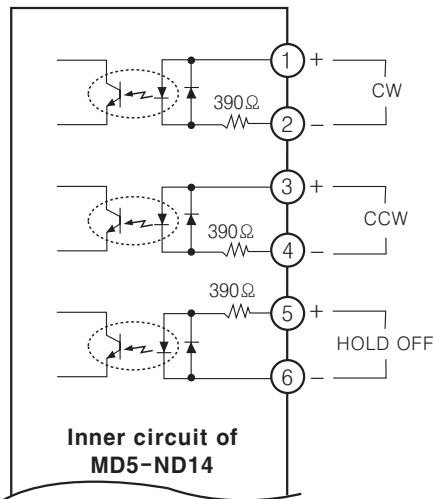

※ CW

- 2 pulse input method (CW)
- 1 pulse input method (Operating rotation signal input)

Note) If the power for driving pulse from external is over than +5V, please connect resistor.


※ CCW

- 2 pulse input method (CCW)
- 1 pulse input method (Rotating direction input) → [H] : CW, [L] : CCW

※ HOLD OFF


The control signal for hold off of Motor → [H] : Motor Hold OFF

Connections

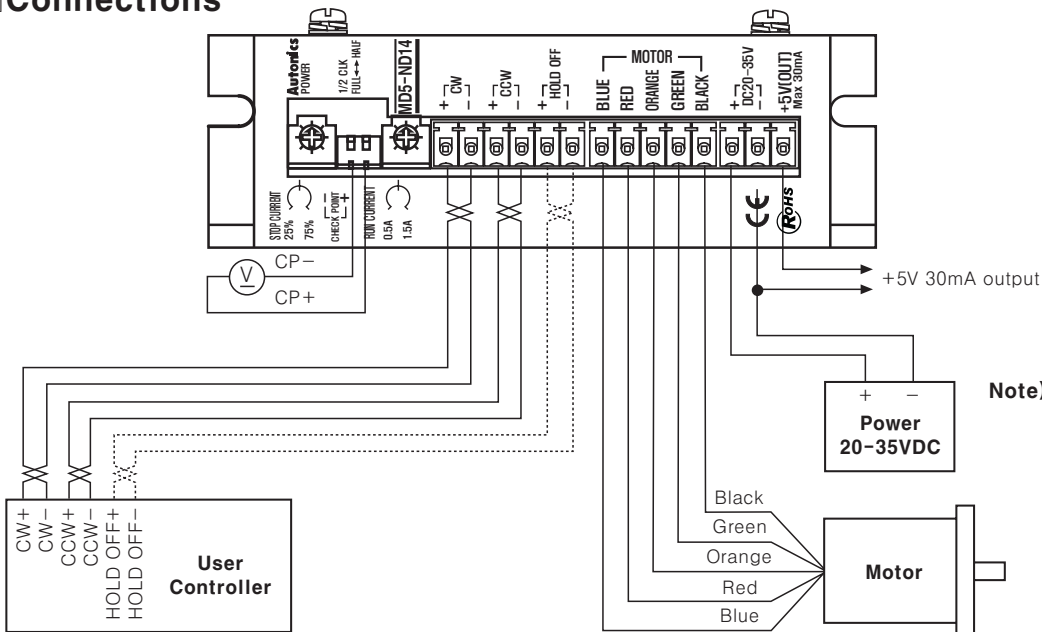

Note) Add external resistance when power for pulse from the external of the unit exceeds +5V. (Input current: 10~20mA)

Dimensions

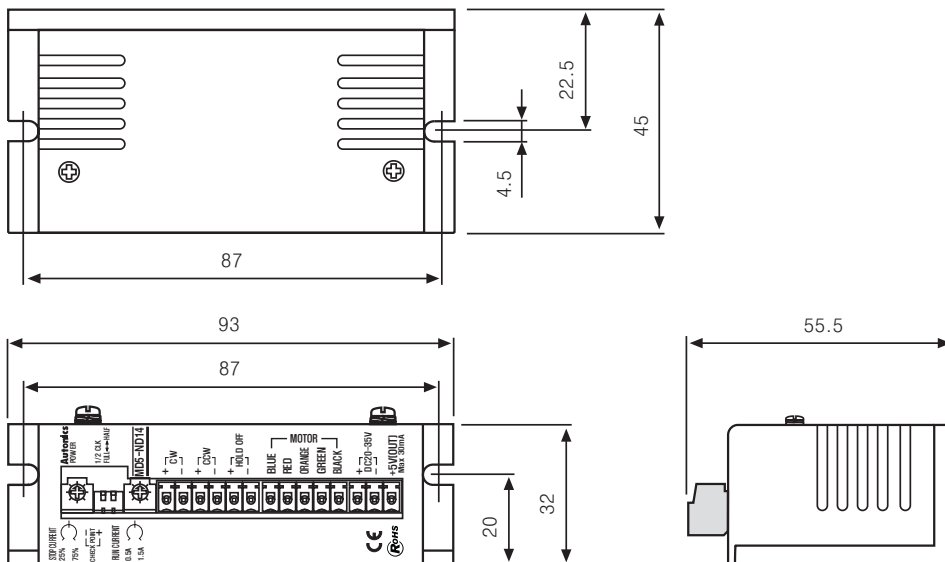

(Unit:mm)